
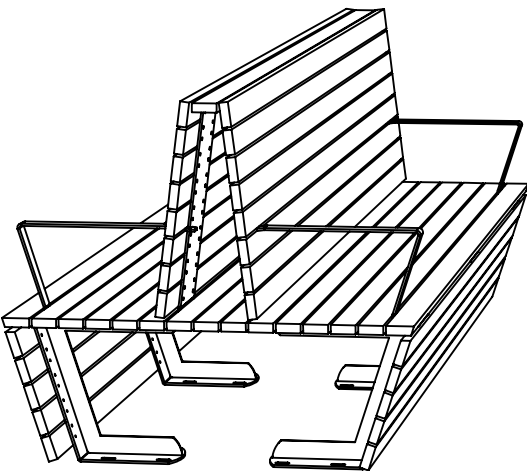
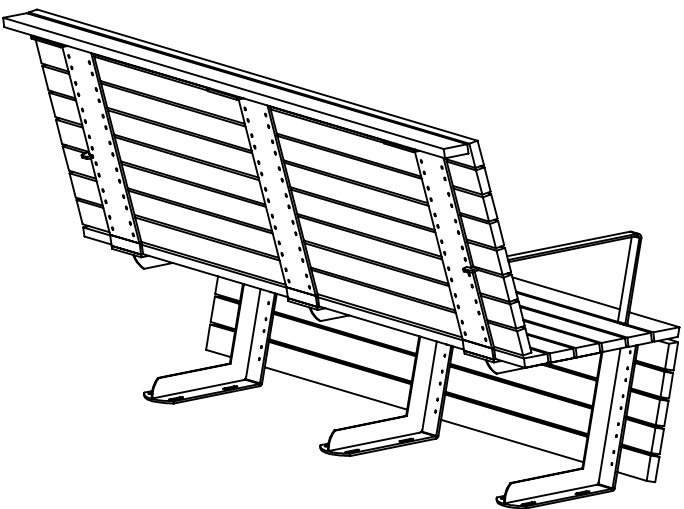


Assembly instructions

Origami Backed bench

Table of contents

Product overview Origami	s. 2
Placement Surface mount	s. 3
Dimensional specification U19-50	s. 4
Dimensional specification U19-53	s. 5
Dimensional specification U19-54/300	s. 6
Dimensional specification U19-54/360	s. 7

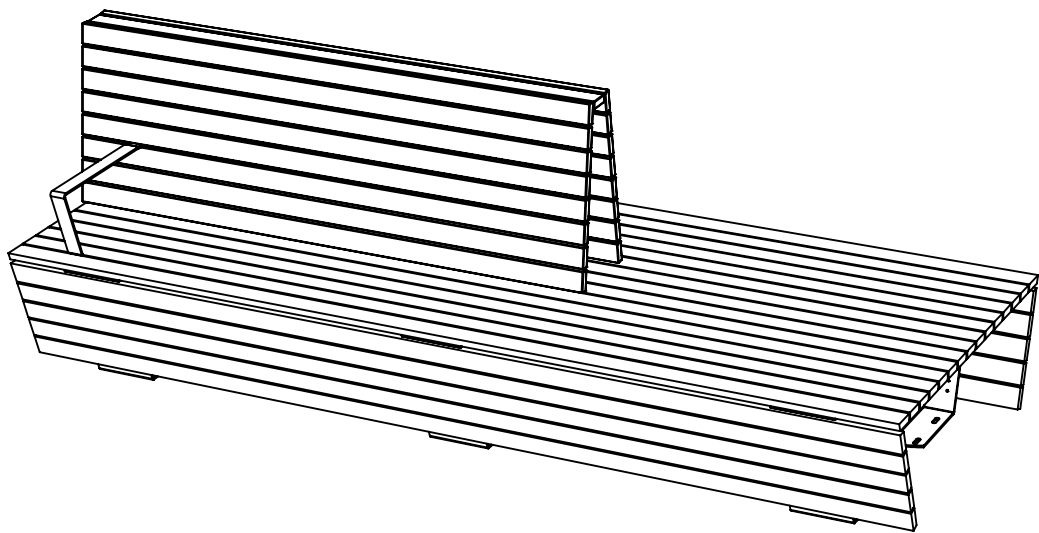


Origami Backed bench


Product overview

Ritad av Joachim Henriksson
Ritad datum 2024-01-22


U19-50 Origami Single sided backed bench
3000 mm, backrest 3000 mm, 2 armrests

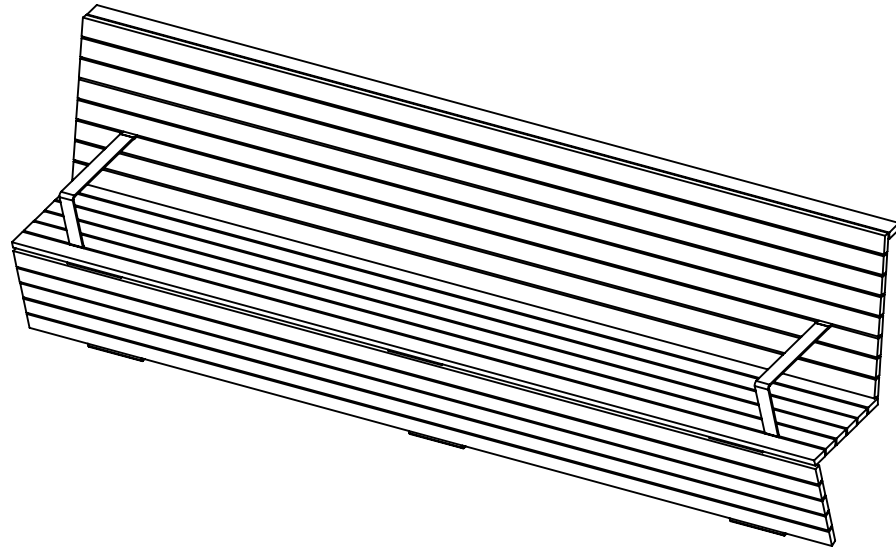


U19-53 Origami Double sided backed bench
3000 mm, backrest 3000 mm, 4 armrests

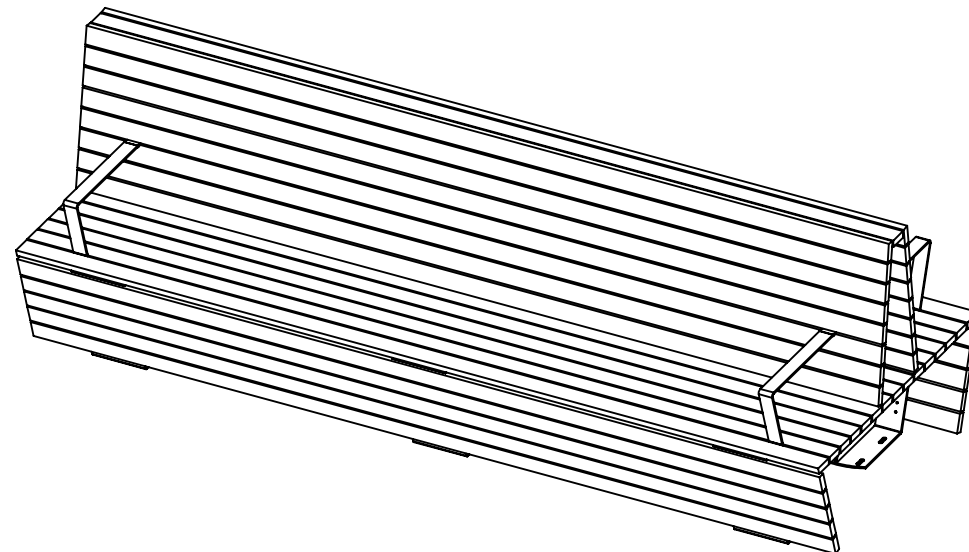

U19-54/300 Origami Double sided backed bench
3000 mm, backrest 1800 mm, 2 armrests

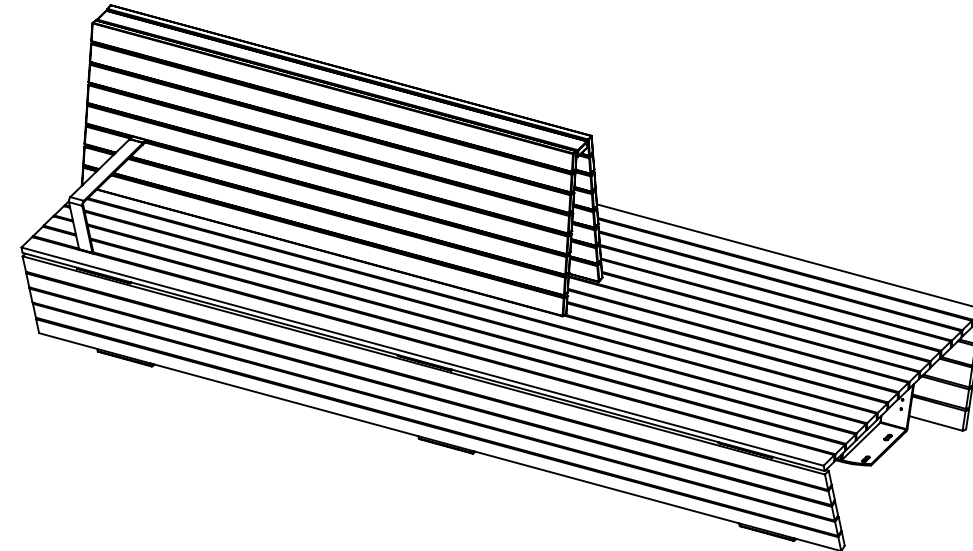


U19-54/360 Origami Double sided backed bench
3600 mm, backrest 1800 mm, 2 armrests

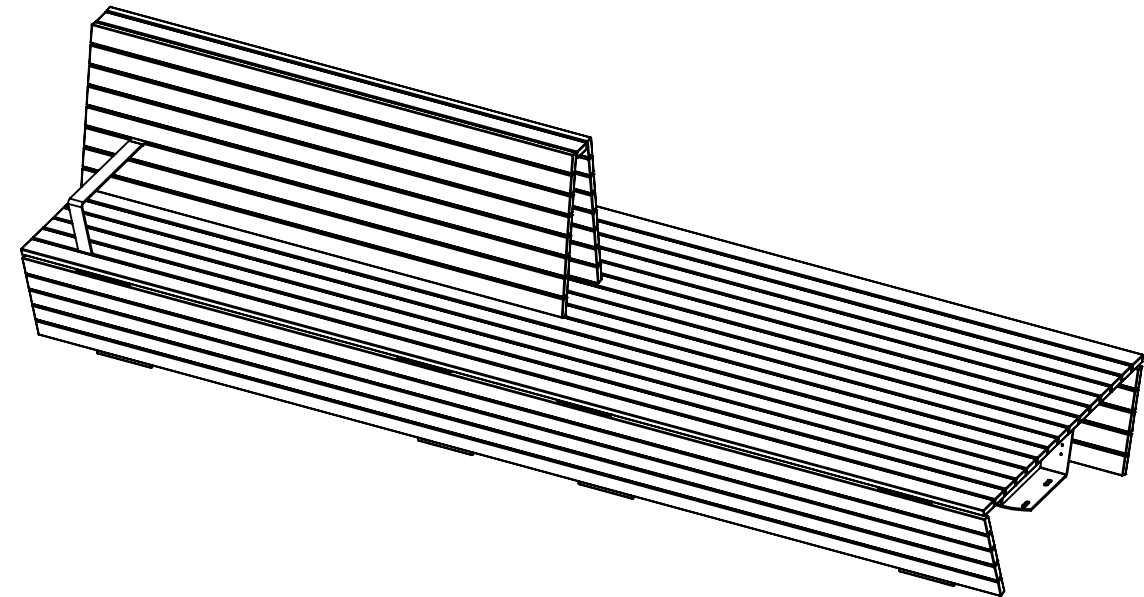

Origami Backed bench

Placement Surface mount

Ritad av Joachim Henriksson
Ritad datum 2024-01-22

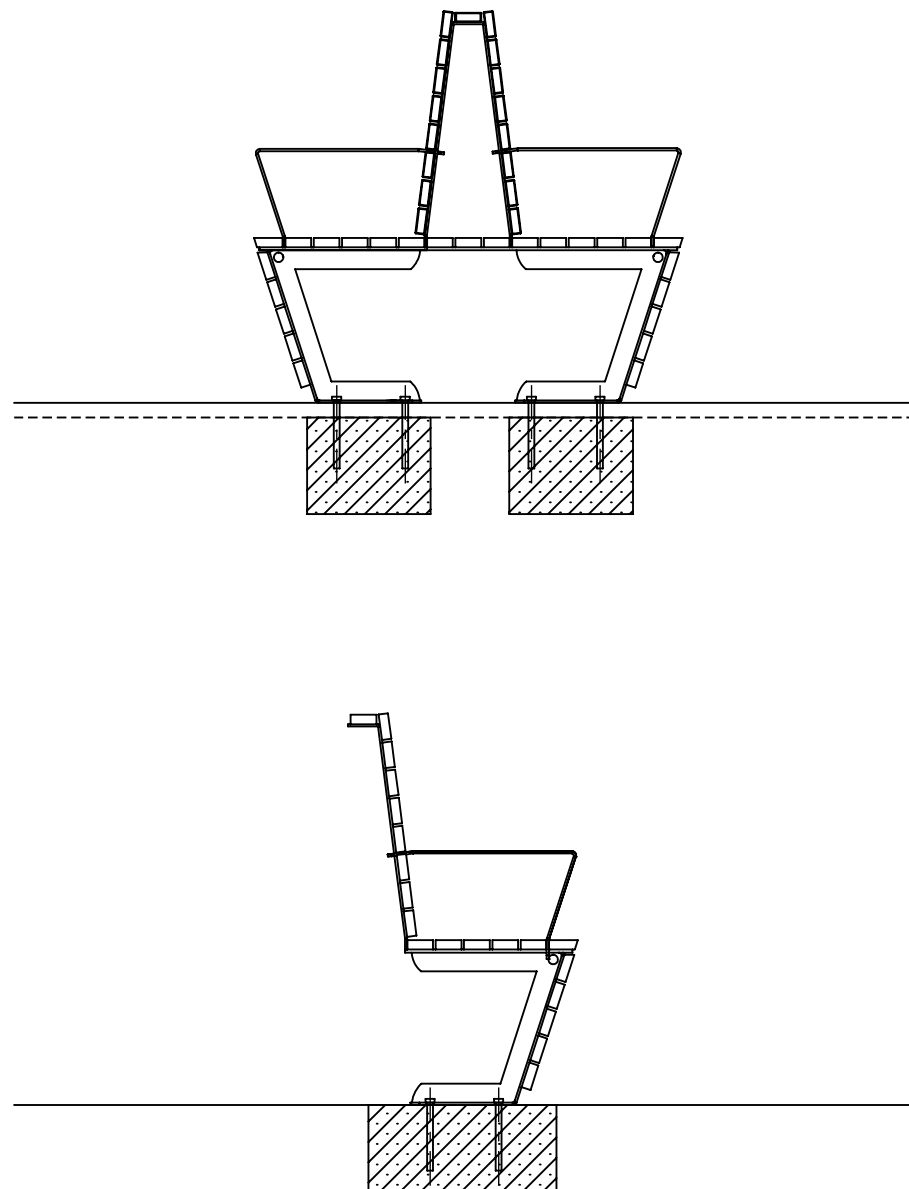

Placement Surface mount

Place the backed bench in position. Mark out the holes on the surface. The holes for attachment are Ø13 mm and are intended for M12 fasteners.

Mounting on a wooden base

Pre-drill and install with French wood screws.

Mounting on paving stones or paving slabs

Undercast slabs with concrete. There must be no settling sand between the slabs and the concrete. Drill the slabs for expander or chemical anchor.

Mounting with expander provides a removable attachment.

Mounting with chemical anchors gives a permanent attachment.

Mounting against concrete or stone blocks

Drill the concrete for expanders or chemical anchors. Mounting with expander provides a removable attachment.

Mounting on gravel or grass



Excavate the ground for a concrete foundation. Cast one foundations in concrete pipes or cardboard pipes. Top on the foundation must end with a radius. Drill the foundation for expanders or chemical anchors.

Attach the foot to the foundation and reset the ground.


Origami Backed bench

Dimensional specification U19-50

Ritad av Joachim Henriksson
Ritad datum 2024-01-22

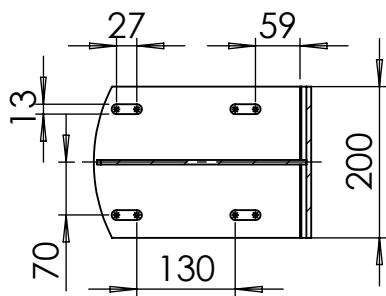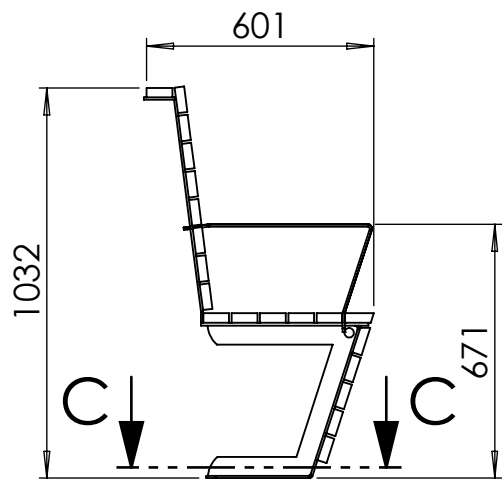

SECTION C-C


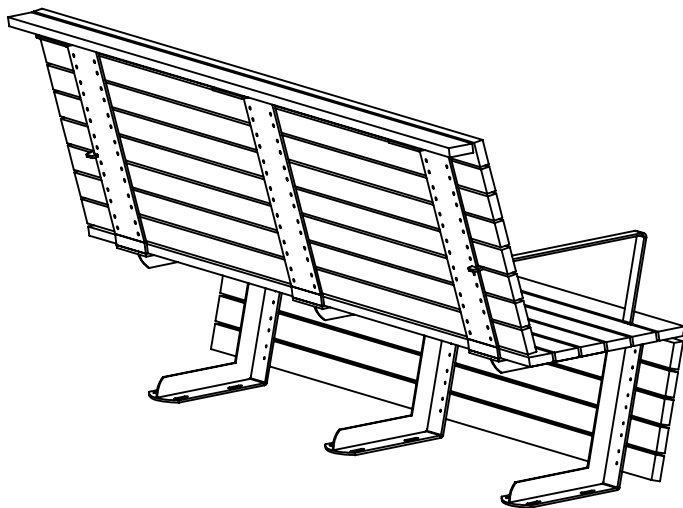


Specifications

U19-50 Origami Single sided backed bench

Single sided backed bench, length 3000 mm with backrest and 2 armrests. 3 frames.


The backed bench is delivered assembled. If you want more armrests than standard, contact Nola. Armrests cannot be fitted afterwards.

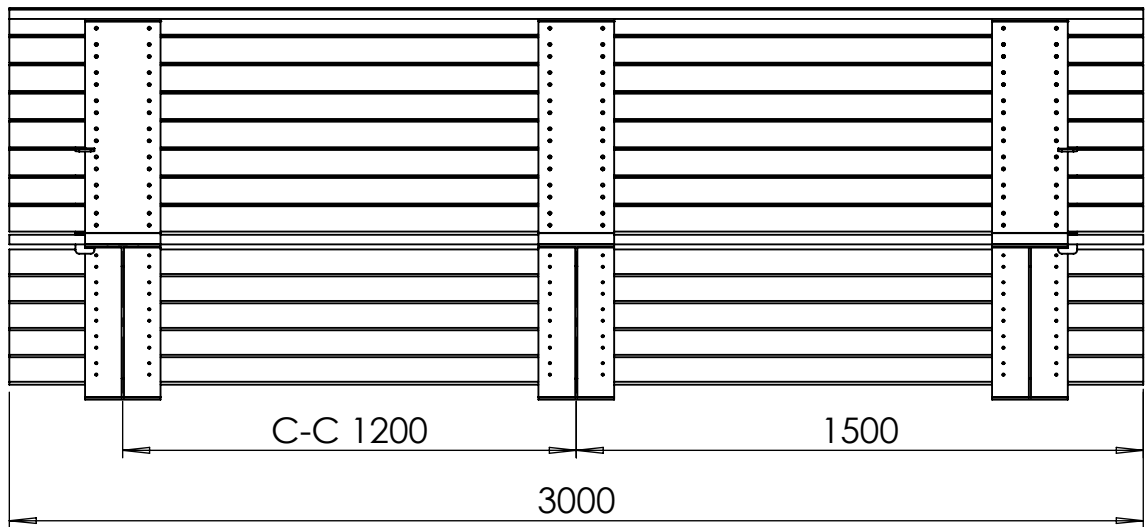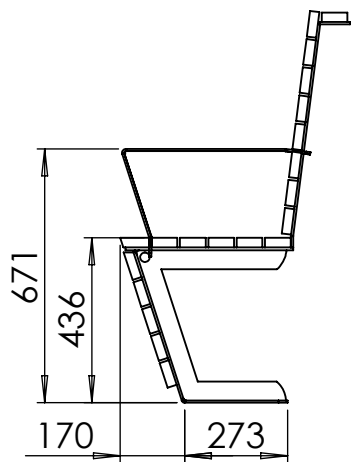

Origami Backed bench

Dimensional specification U19-53

Ritad av Joachim Henriksson
Ritad datum 2024-01-22


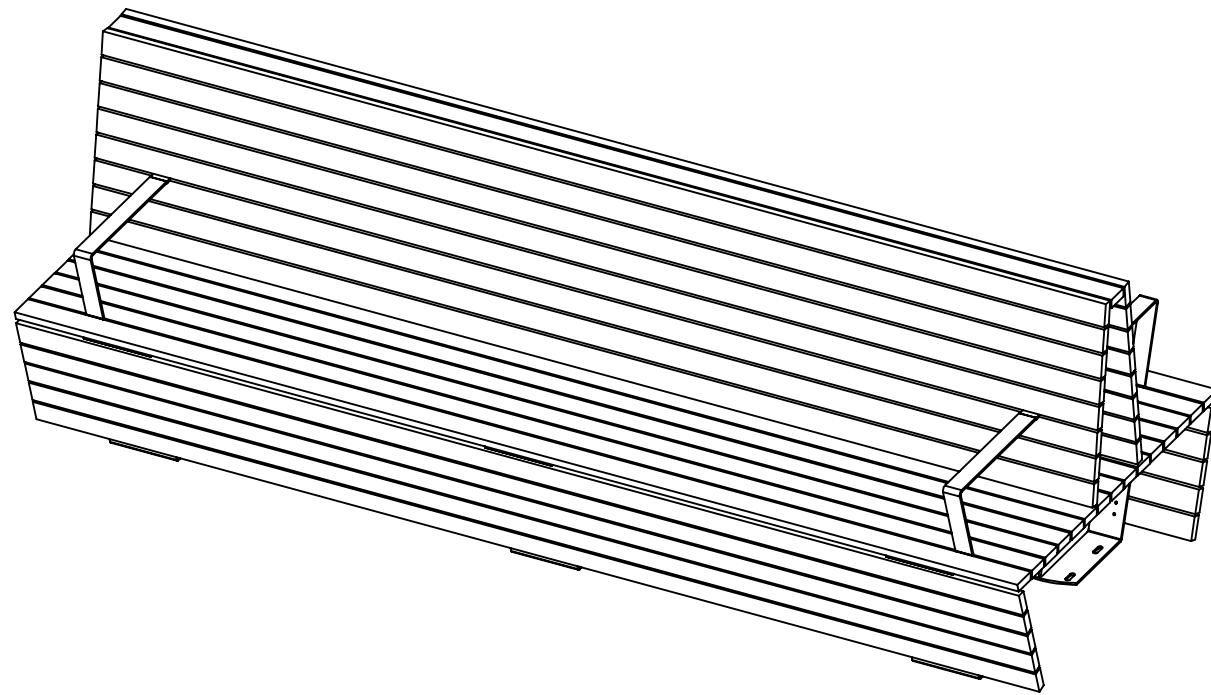


Specifications

U19-53 Origami Double sided backed bench with full backrest

Double sided backed bench with full backrest, length 3000 mm with 3000 mm backrest and 4 armrests. 3 frames.


The backed bench is delivered assembled. If you want more armrests than standard, contact Nola. Armrests cannot be fitted afterwards.

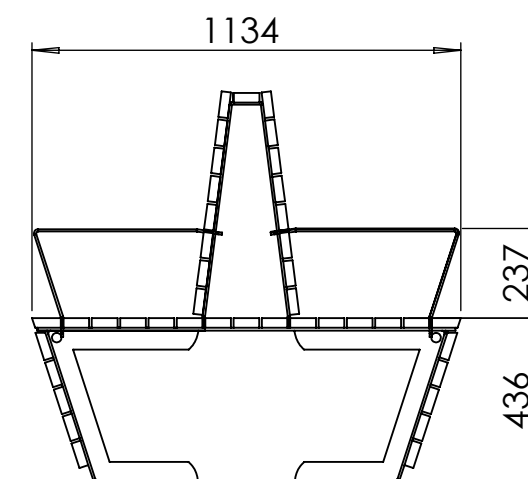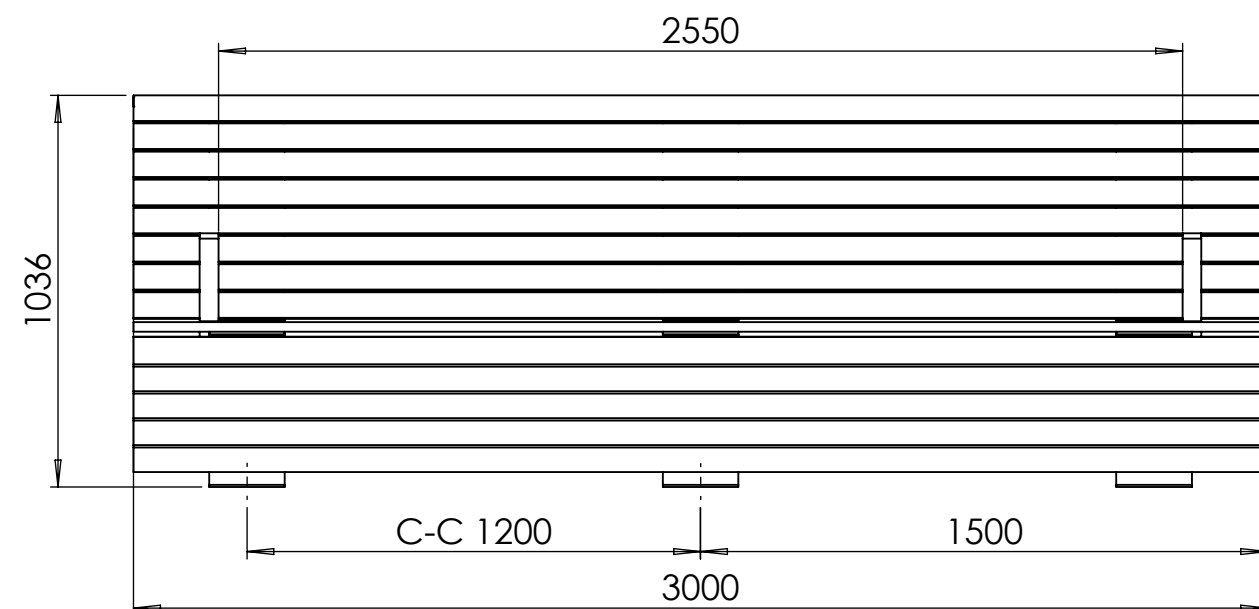

Origami Backed bench

Dimensional specification U19-54/300

Ritad av Joachim Henriksson
Ritad datum 2024-01-22


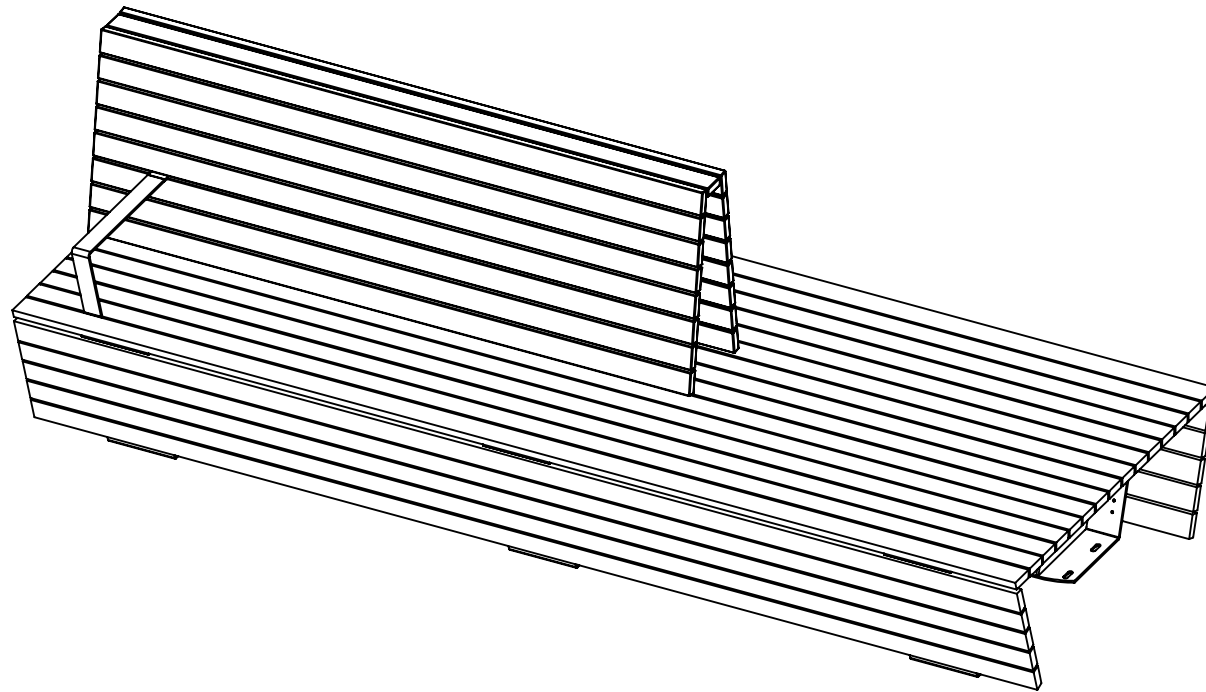


Specifications

U19-54/300 Origami Double sided backed bench with half backrest

Double sided backed bench with half backrest, length 3000 mm with 1800 mm backrest and 2 armrests. 3 frames.


The backed bench is delivered assembled. If you want more armrests than standard, contact Nola. Armrests cannot be fitted afterwards.

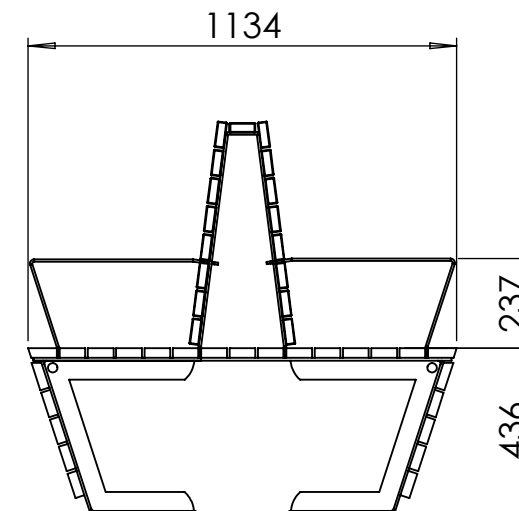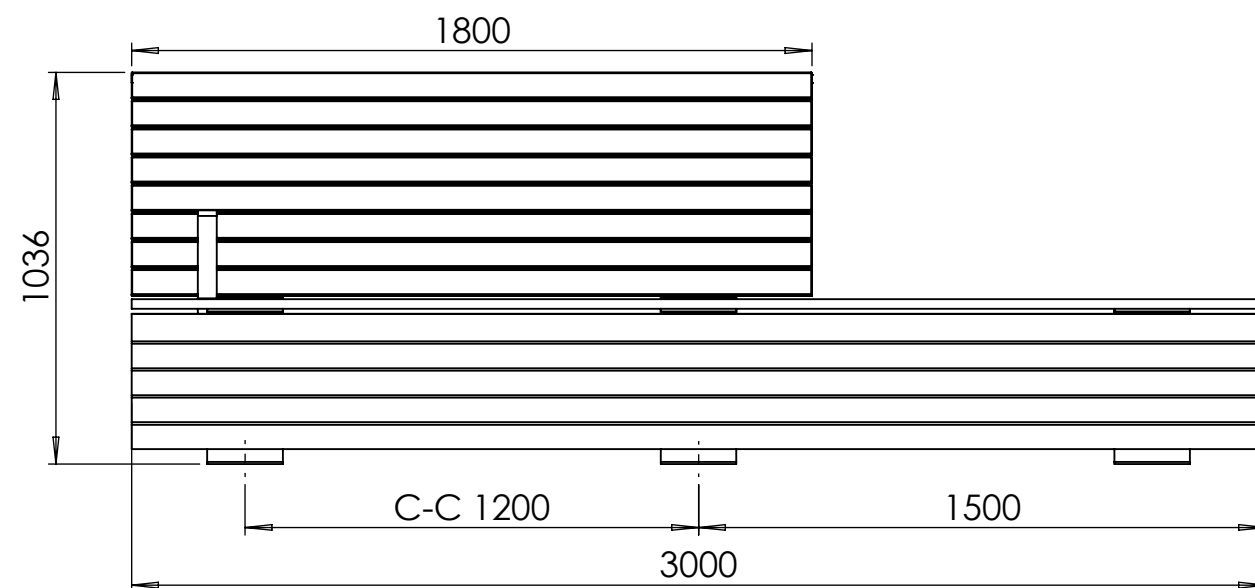

Origami Backed bench

Dimensional specification U19-54/360

Ritad av Joachim Henriksson
Ritad datum 2024-01-22

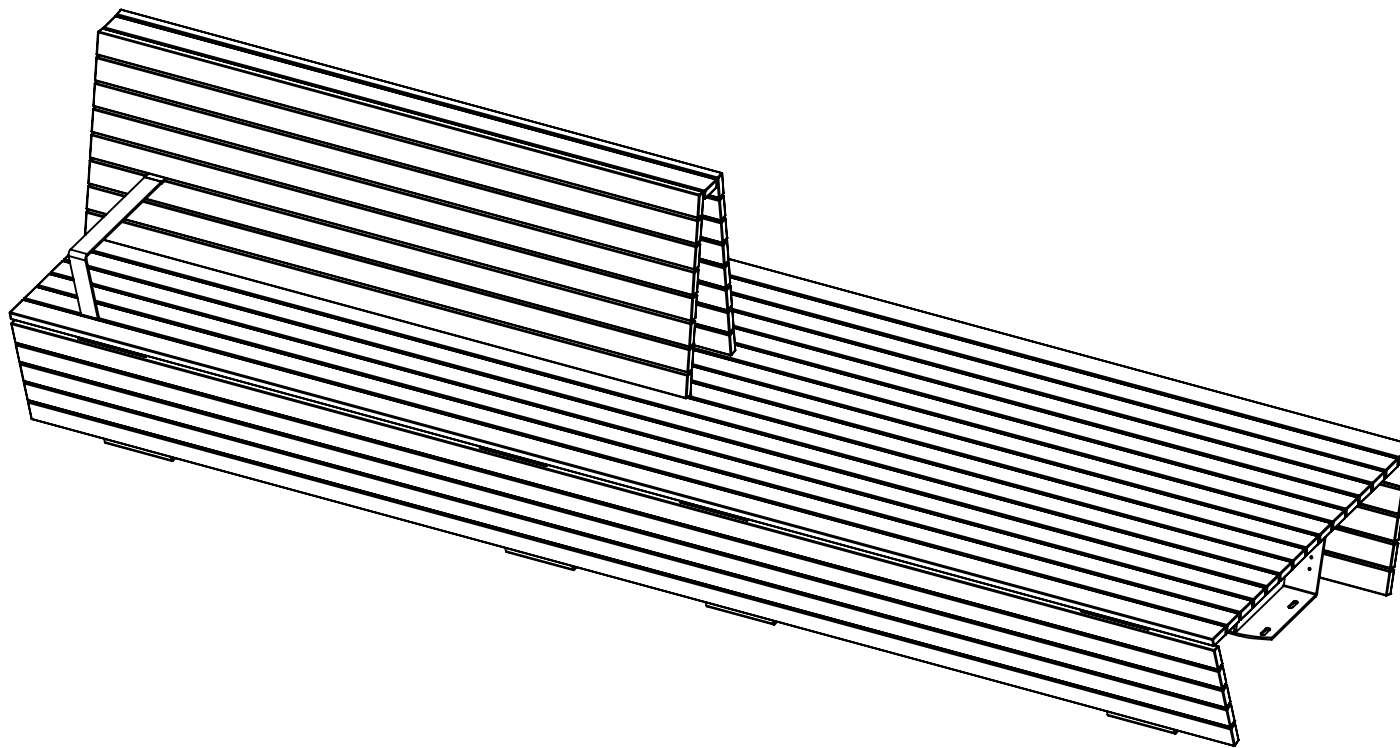

Specifications

U19-54/360 Origami Double sided backed bench with half backrest

Double sided backed bench with half backrest, length 3600 mm with 1800 mm backrest and 2 armrests. 4 frames.

The backed bench is delivered assembled. If you want more armrests than standard, contact Nola. Armrests cannot be fitted afterwards.

